


105U-1, 105S-1

Installation Guide

Statutory Requirements

EC: Unlicensed operation limits the radio power. High gain aerials may only be used to compensate for cable losses.

Aerial Installation

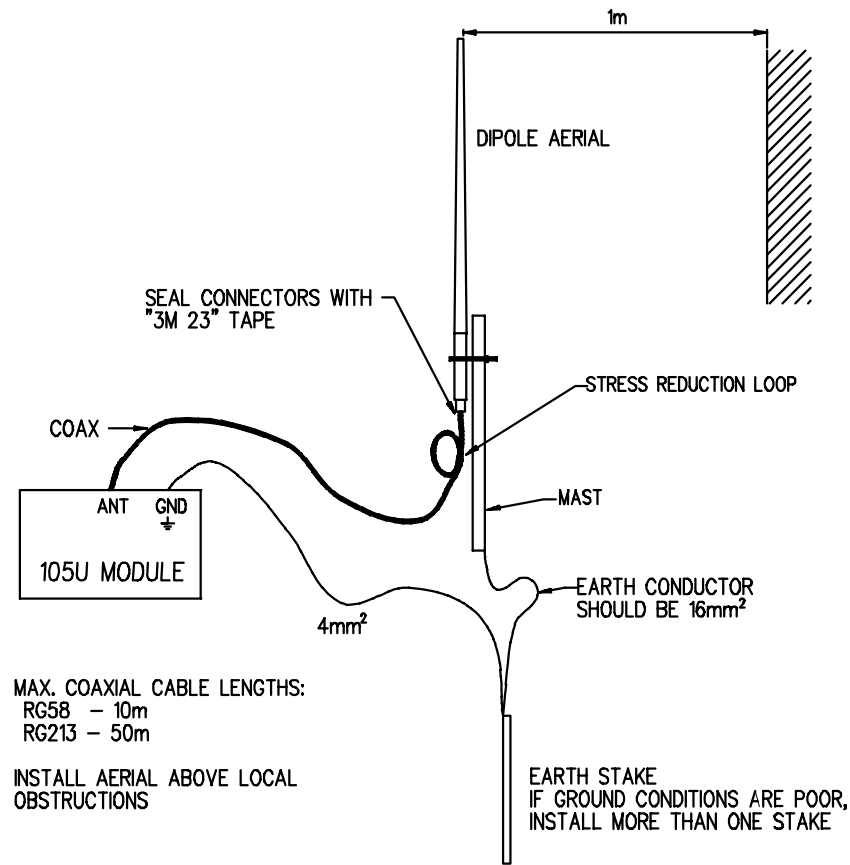

105-1 I/O Installation

- Power supply may be:
- (A) 12-24VAC
 - (B) 15-30VDC
 - (C) Supply battery or 11-15VDC
 - (D) Solar panel with solar battery

Choose option and wire as shown

NOTES

- Digital Outputs are Relay contacts. For ratings refer to User Manual.

AC Supply use 10nF 250V Surge Capacitor.

DC Supply, use Bypass Diode.
- Analog Outputs are either Loop Powered or Externally Powered - Output Loops are earthed (not floating).

